


SMART® GX Plus interactive display

Need help with your display? Check out these basic troubleshooting tips.



Turn on the display

Press the Power button  on the front control panel.

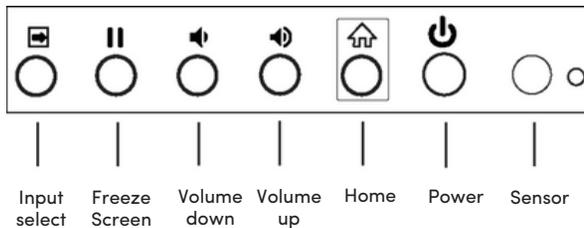

Sign in

Sign in with a Google or Microsoft account to access cloud files and personalize your display. To download apps or use default Google apps, sign in with a Google account.

Use the File Manager to move or copy files between the display and your cloud storage.

Go to **All Apps > File Manager > Cloud Drive** to access Google Drive or OneDrive.

Write and erase

Pick up one of the display's pens and write or draw in digital ink. To erase, move your fist or palm over the ink.



Use the Whiteboard


Start a new whiteboard or open saved notes from the display, USB, or cloud. Use pens or fingers to write, erase, and draw. Save your work as a file or export it as images or a PDF. You can also share notes using a QR code or email.

Access tools to change backgrounds, add pages, shapes, or templates, and import content like PDFs or images. Use the File Manager to organize and access whiteboard files.

Connect your computer

Connect a computer to your display using an HDMI cable and, to enable touch, a USB cable.

Or use a single USB-C cable to connect a computer for both video and touch.

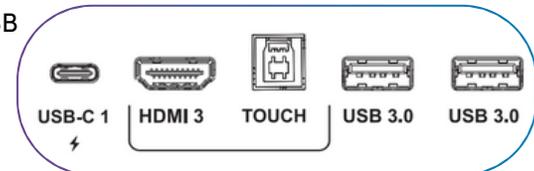

Then press the Input Select button  on the control panel, then tap the computer's input menu option.

Use SMART Mirror

Share your screen with the SMART Mirror app. Tap  to get started. Students can share content from any device and teachers can view, interact with, and control up to 9 live screens at once.

Visit smarttech.com/smartmirror to learn more.