

Quick Start Guide

- To make sure we use the product correctly and safely please read this instruction carefully before installation.
- Apply to 43-65 inch IFP by suggestion.
- Max bearing weight is 30KG.

Material List



A-Base 1pc



B-Column 1pc



C-Wall mount 1pc



D-Fixed plate 1pc



E-Adjustable clamp 1pc



F-Brackets 2pcs

Accessories list

①	Screw	M6*10mm	3pcs	②	Including spare parts 1pc
②	Screw	M6*16mm	5pcs	③	Including spare parts 1pc
③	Screw(Imperial)	M6*10mm	3pcs	④	Including spare parts 1pc
④	Screw	M5*8mm	5pcs	⑤	Including spare parts 1pc
⑤	Screw	M4*6mm	4pcs	⑥	Including spare parts 1pc
⑥	Washer	⑥6	3pcs	⑦	Including spare parts 1pc
⑦	Nut	M6	3pcs	⑧	Including spare parts 2pcs
⑧	Screw	M6*45mm	3pcs	⑨	Including spare parts 2pcs
⑨	Wrench		1set	⑩	13#-10# + L#

Other Accessories

⑪	Plastic	wire clip	6pcs	⑫	
⑬	Polyester	velcro	6pcs-short + 2pcs-long		



Assembly Step

Step 1

Install the column on the base. (Figure 1)



Figure 1

Step 2

Rotate the product 90 degrees and place it on the table, then unscrew the hand-screwed screw and take out the lower cover. (Figure 2)



Figure 2

Step 3

Install the fixed plate on the wall - mounted board, And tighten the adjustment clamp. (Figure 3)

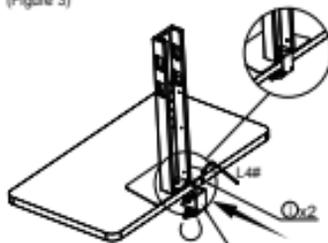


Figure 3

Step 4

Remove the left and right rear covers on the back of the wall mount. (Figure 4)

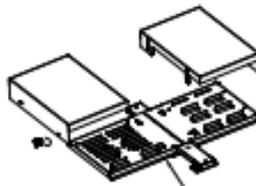


Figure 4

Step 5

Adjust the bracket to the lowest point, install the fixing plate and bar.(Figure 5)
 Note: Bar is provided by the user.


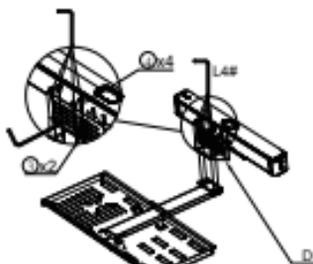


Figure 5

Step 7

Install the wall mount to the column and tighten the thumb screws. The bar can be installed on the top of the wall mount or on the bottom of the wall mount, as shown in the following two states.(Figure 7)

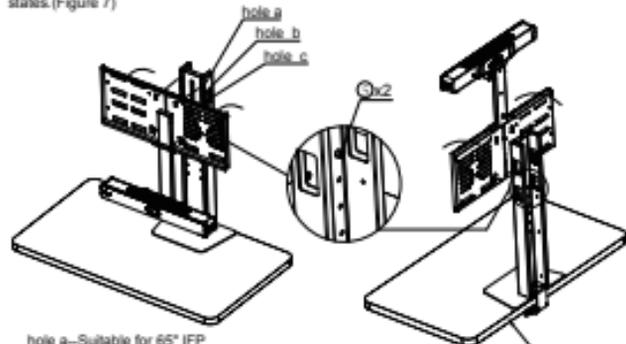

hole a—Suitable for 65" IFP
 hole b—Suitable for 55" IFP
 hole c—Suitable for 43" IFP
 Make sure the screws are tight

Figure 7

Step 8

Install the Brackets on the IFP.(Figure 6)

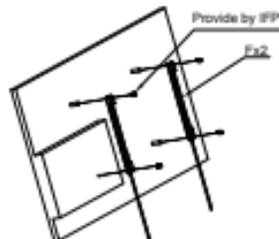


Figure 6

Step 8

Hang the IFP on the wall mount. The groove of the wall mount is the assembly position. After installation, make sure that the bottom latch bracket is locked into place. (Figure 8)

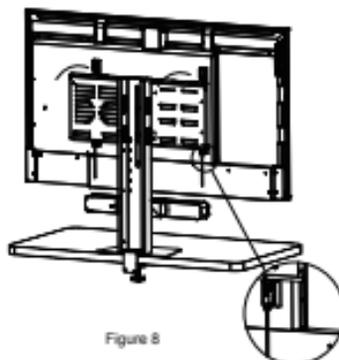


Figure 8

Step 9

Use Velcro to attach PC, power socket, adapter and other devices to the wall mount. (Figure 9)


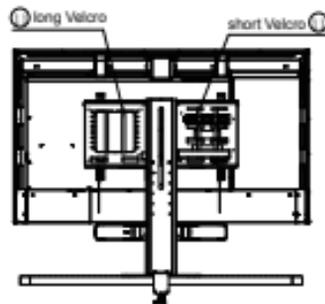


Figure 9

In this state, you need to unscrew the hand screws of the camera bracket, turn the long bracket 180° and tighten them, adjust the long bracket to the lowest point, and then install the bar.

Step 10

This wiring system diagram is for reference only. Please refer to the actual solution for the specific wiring scheme. Cable management can be fixed with cable ties. (Figure 10)

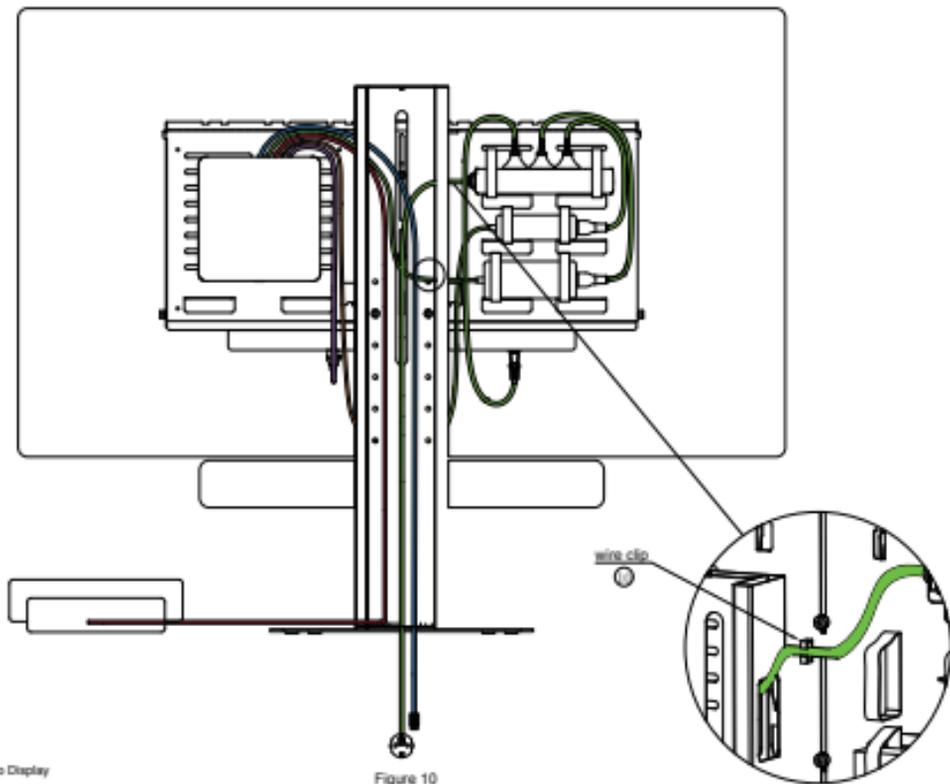

Step11

Install the left and right rear covers of the wall mount and tighten the thumb screws. (Figure 11)

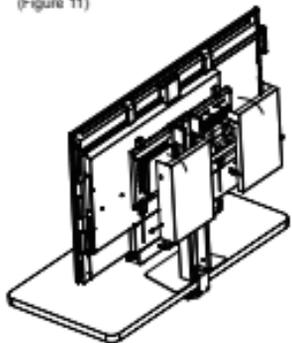


Figure 11

Step12

Install the rear cover of the column and tighten the thumb screws. (Figure 12)

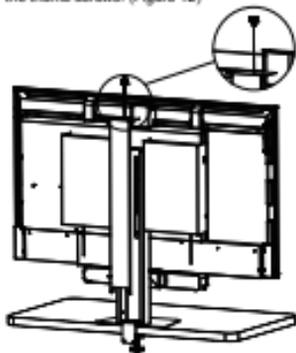


Figure 12

End

Installation completed effect picture. (Figure 13)

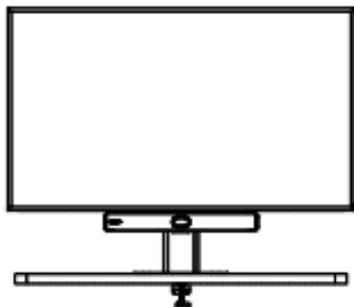


Figure 13

Other Installation Options

Users can choose not to install the adjustment plate, but to make a large through hole on the table top, and then fix it to the table top with long screws and nuts. (Figure 14-16)

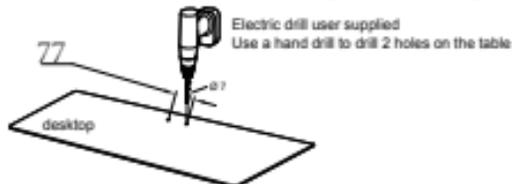


Figure 14

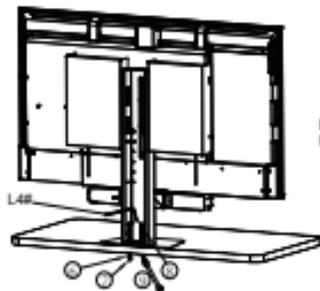


Figure 15

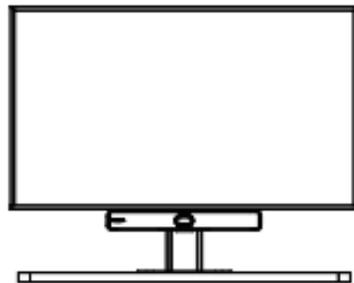


Figure 16

Install the back cover according to step 12. The final installation effect is shown in Figure 16.